



## 1. Name of the product

Time Timer Plus

## 2. Product code

05025471,05026471 & 05034471

## 3. Colour

Black with white and red

White and red

White and purple

## 4. Short description

Use the Time Timer to learn the concept of elapsed time, to use time efficiently, to keep track of time during activities, or to encourage independence. The timer is a visual timer that can be used without even knowing time. At home and in daily life the Time Timer has many applications that help everyone become more productive, more organized and more relaxed during the day.

## 5. Product specifications

Specifications Plus 60 minutes:

Size: 14 x 18 cm

Batteries: 1x AA

Specifications Plus 120 minutes:

Size: 14 x 18 cm

Batteries: 1x AA

## 6. Replacing batteries

Sometimes you may need to replace the battery in your Time Timer. If the red disc stops moving, check the lens cap before replacing the battery.

To replace the AA battery, follow the instructions below:

**If your model has a screw on the battery cover**





1. Open the battery compartment on the back of your Time Timer PLUS with a small Phillips screwdriver.
2. Insert the AA battery with the negative side (the flat end) first into the battery compartment so that it touches the spring.
3. Place the cover back on the battery compartment and tighten it with the small Phillips screwdriver.

**If your model does not have a screw on the battery cover**



1. Open the battery compartment at the back of your Time Timer PLUS by gently lifting open the cover at the back of the timer.
2. Insert the AA battery with the negative side (the flat end) first into the battery compartment so that it touches the spring.
3. Replace the battery compartment cover by simply clicking it closed.

**Battery recommendations**

We recommend using high-quality, branded batteries to ensure accurate timing. You can use rechargeable batteries with the Time Timer, but they may run down faster than traditional batteries. If you plan not to use your Time Timer for an extended period (several weeks or longer), remove the battery to prevent corrosion.





## 7. Choose sound preference

The Timer itself is silent - no distracting ticking sound, but you can choose the volume and whether or not you want a warning sound when the time runs out. Simply use the volume knob on the back of the Timer to adjust the audio alerts.



### 7.1 Setting the Timer

Turn the middle knob on the front of the Timer counterclockwise until you reach your chosen time. Your new Timer immediately starts counting down and a quick glance reveals the remaining time thanks to the brightly coloured disc and large, easy-to-read digits.



## 8. Maintenance

Our Timers are made to be as durable as possible, but like many clocks and timers, they have a quartz crystal hub. This mechanism makes our products quiet, accurate and easy to use, but it also makes them susceptible to tampering, or throwing. Use Time Timers with care and under supervision!

For more information, you can visit our website [www.nenko.com](http://www.nenko.com)

