

19120095 → Replacing the Lamp

1. Unscrew the 2 screws on the front of the bubble tube. In the new models, the screws are covered with a white cap. You can remove this cap to access the screw



2. Remove the front panel; you will now see the internal components of the bubble tube.
3. Remove the old lamp and insert the new lamp.

