

Replace Pump of Bubble Unit

Loosen the hood by unscrewing the screws. On each side is 1 screw



Lift the lid up. You can now see the inside.



Loosen all wires/hoses that go to the pump. The power supply of the pump comes from the lamp. You can pull the green crown stone loose so that you can easily unscrew the cable of the pump.

