

## 1. Product name

Sensory Wagon with LED screen

## 2. Product code

21967010

## 3. Colour

As shown

## 4. Description

This Snoezel Cart with LED screen is delivered in a wooden transport crate for safety and service reasons.

## 5. Sensory stimulation

Touch, smell, hearing and sight

## 6. Use

1. You will receive the Snoezel Cart in a wooden crate, as shown below.
2. The crate is assembled with screws. Unscrew the front wooden panel and then drive or lift the Snoezel Cart out with two people, due to its weight and to prevent damage.
3. Then, remove the protective film from the plexiglass of the screen.
4. Detach the key and open the door.



5. Do the same for the back. The key is fastened with a tie-wrap in the door opening (handle). In a materials cart, the key is placed on top of the cart (44502010).
6. Tilt the back section slightly upwards using the footrest, making it easier to drive in and out.



- Now fill the bubble tube with water. Be careful not to overfill the tube, and avoid spilling water outside the tube to prevent damage to electronic components. See further instructions for bubble tubes on our website. **Attention! Do not connect the Snoezel Cart if it is not filled with water!**



- Remove all products from the packaging and connect the loose plugs to the corresponding products.
- The plug for the section with the bubble unit can be connected to the side of the Snoezel Cart.



- In the cabinet, there is a control panel that allows you to switch the products on or off. **NOTE!** The items themselves may also have a separate on/off switch.



For the operating diagram, see the included schematic.

- Connect the cart to the power supply and it is now ready for use!





## 7. Specifications

Dimensions: 65 x 60 x 147 cm

Power Supply: 220 V

For more information, visit our website [www.nenko.com](http://www.nenko.com)

