



1. Name of the product

Time Timer pocket

2. Product code

50030471



3. Colour

Black with white and red

4. Short description

Use the Time Timer to learn the concept of elapsed time, to use time efficiently, to keep track of time during activities, or to encourage independence. The timer is a visual timer that can be used without even knowing time. At home and in daily life the Time Timer has many applications that help everyone become more productive, more organized and more relaxed during the day.

5. Product specifications

Size: 7,5 x 7,5 cm

Batteries: 1x AA

6. Replacing batteries

To replace the AA battery, follow the instructions below:

If your model has a screw on the battery cover



1. Open the battery compartment on the back of your Time Timer Pocket with a small Phillips screwdriver.
2. Insert the negative side of the AA battery (the flat end) into the compartment first so that it touches the spring.
3. Place the cover back on the battery compartment and tighten it with the small Phillips screwdriver.





If your model does not have a screw on the battery cover



1. Open the battery compartment at the back of your Time Timer Pocket by gently lifting open the flap at the back of the timer.
2. Insert the negative side of the AA battery (the flat end) into the compartment first so that it touches the spring.
3. Place the cover back on the battery compartment by simply clicking the cover closed.

Battery recommendations

We recommend using high-quality, branded batteries to ensure accurate timing. You can use rechargeable batteries with the Time Timer, but they may run down faster than traditional batteries. If you plan not to use your Time Timer for an extended period (several weeks or longer), remove the battery to prevent corrosion.





7. Choose sound preference

The Timer itself is silent - no distracting ticking sound, but you can choose the volume and whether or not you want a warning sound when the time runs out. Simply use the volume knob on the back of the Timer to adjust the audio alerts.



7.1 Setting the Timer

Turn the middle knob on the front of the Timer counterclockwise until you reach your chosen time. Your new Timer immediately starts counting down and a quick glance reveals the remaining time thanks to the brightly coloured disc and large, easy-to-read digits.



8. Maintenance

Our Timers are made to be as durable as possible, but like many clocks and timers, they have a quartz crystal hub. This mechanism makes our products quiet, accurate and easy to use, but it also makes them susceptible to tampering, or throwing. Use Time Timers with care and under supervision!

For more information, you can visit our website www.nenko.com

