



1. Product Name

Time Timer RETRO

2. Product Code

99489471

3. Short Description

The Time Timer has an open design, where the lens has been omitted to reduce plastic usage. This simplifies the repair of the disk and extends the product's lifespan.

4. Sensory Stimulation

See

5. Specifications

Battery: 1 x AA

Dimensions: 19 cm x 19 cm x 3 cm

6. Installation

1. Install 1 AA battery

The battery compartment is located on the back of the Time Timer® Medium RETRO Eco Edition visual timer. Simply lift the battery cover flap to insert the battery into the compartment. Reattach the battery cover by aligning the tabs at the top edge and gently pressing until you hear a "click." Requires 1 AA battery.



2. Choose your sound preference

The timer itself is silent – no annoying ticking – but you can choose whether or not you want an audio alert when the time is up. Simply use the on/off switch on the back of the timer to adjust the sound alerts.



3. Set your timer

Use the transparent button on the disc and turn it counterclockwise until you reach the desired time. Your new timer will start the countdown immediately, and with a quick glance, you can see the remaining time thanks to the contrasting disc and large, easy-to-read numbers.





7. Battery

We recommend using high-quality batteries from reputable brands to ensure accurate timekeeping. You can use rechargeable batteries with the Time Timer, but they may deplete faster than traditional batteries. If you do not plan to use your Time Timer for an extended period (several weeks or longer), please remove the battery to prevent corrosion.

8. Product Care

The timers are designed to be as durable as possible, but like many clocks and timers, they contain a quartz crystal. This mechanism makes our products quiet, precise, and easy to use, but it also makes them sensitive to impacts or drops. Please handle them with care.

For more information, please visit our website www.nenko.com

