



1. Product name

Nenko Step in ultra violet panel

2. Product code

29203085

3. Short description

The UV panel offers unique opportunities for sensory stimulation, suitable for people with disabilities, elderly people with dementia and children without disabilities. The UV illumination stimulates visual perception and promotes creativity and interaction, creating a stimulating environment that stimulates the imagination.

4. Product specifications


Height: 50 cm

Width: 50 cm

Thickness: 6 cm

Weight: 3.25 kg

5. Assembly

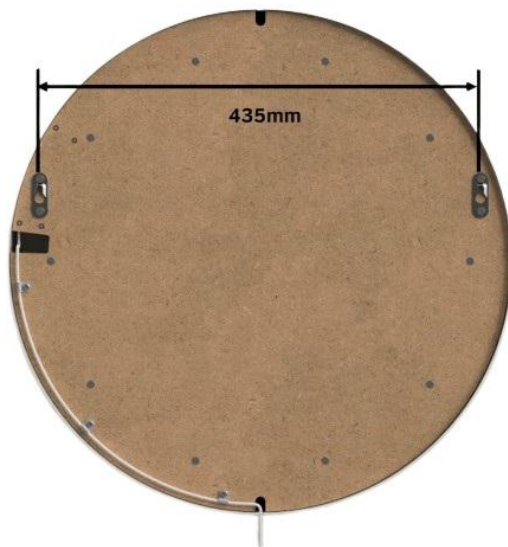

On the back of the panel you will find 2 hanging brackets. These are spaced 435 mm apart (centre to centre). Simply screw 2 screws into the desired mounting surface, at the correct distance, and hang the panel in place.

Once it is in place, the power cable and adapter plug can be plugged in and switched on.





6. How to use

On the side of the panel, you will find a toggle switch that you use to switch the panel on and off.



Use the robust button on the front of the panel to activate the UV LEDs. Once activated, the LEDs stay on for 10 minutes.



Included with this panel are 3 ultra violet light reactive inserts....



These inserts are fitted with Velcro and can be attached inside the panel.

7. Troubleshooting

This panel is designed with low maintenance in mind.

If problems arise:

- Switch off the panel, unplug it and check that the power cable is correctly plugged into the back of the unit (see below).



- Switch off the panel, unplug it and leave for 1 minute to perform a reset. After this time, plug back in and turn the panel back on.



8. Maintenance

If the product needs cleaning, use only a soft, damp cloth.

DO NOT use harsh chemicals or abrasives.

Electrical specifications

INPUT: 100-240V 50/60Hz, 0.7a

OUTPUT: 5V 3A

For more information, you can visit our website www.nenko.com

